

# Default Key Settings

## Customize Remote

[Configuration > Remote > Mapping Buttons](#) - to learn how to assign functions to your remote keys

The default key or button settings for a general remote are:

Command	Key
Navigate	Up, Down, Left, Right
Prev/Next page	Channel up/down
Previous menu	Back
Enter number	0 .. 9
Activate	OK
Context menu	Info
Volume down/up	Volume down/up
Mute	Mute
Play	Play/Play all in Selected Folder
Pause	Pause
Stop	Stop
Rewind/Fast Forward	Rewind/Fast Forward
Skip prev/next	Replay/Skip
Home/Switch Home	Start
Exit MP	Power